


MONTREAL COFFEE TABLE ASSEMBLY INSTRUCTIONS

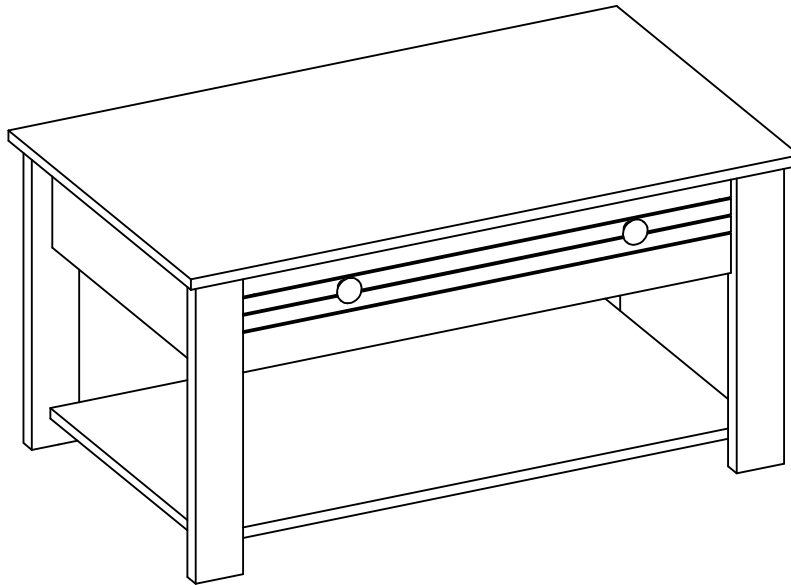



IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

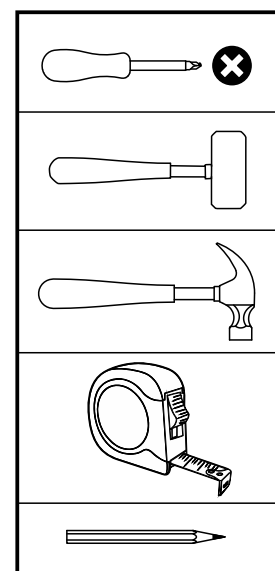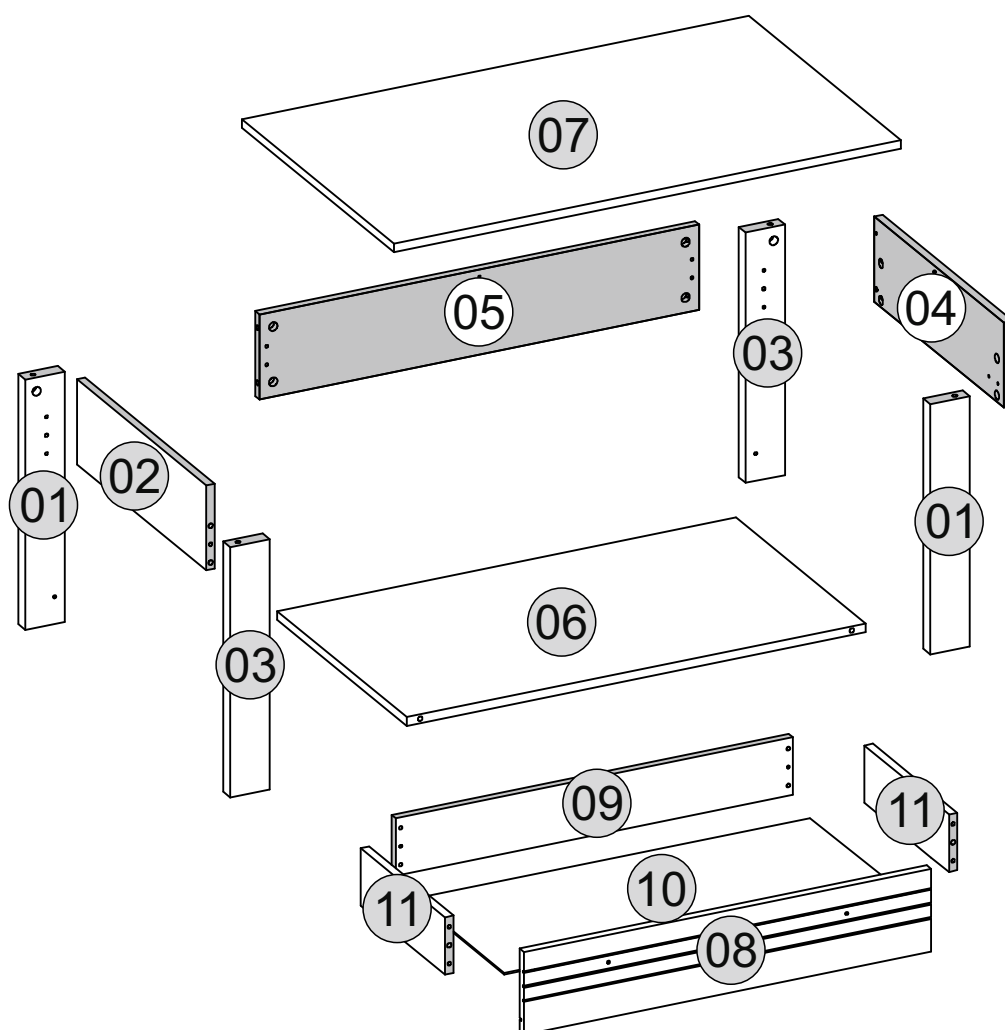












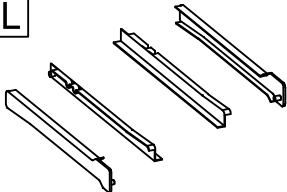
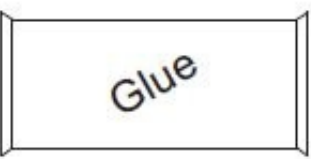


PARTS LIST

Please Note:



The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Code	Part Description	Quantity	Carton
01	S300-301-057-CM1-01	Right Front/Back Left Leg	2	1/1
02	S300-301-057-CM1-02	Left Side Panel	1	1/1
03	S300-301-057-CM1-03	Left Front/Back Right Leg	2	1/1
04	S300-301-057-CM1-04	Right Side Panel	1	1/1
05	S300-301-057-CM1-05	Back Panel	1	1/1
06	S300-301-057-CM1-06	Base Panel	1	1/1
07	S300-301-057-CM1-07	Top Panel	1	1/1
08	S300-301-057-CM1-08	Drawer Front	1	1/1
09	S300-301-057-CM1-09	Drawer Back Panel	1	1/1
10	S300-301-057-CM1-10	Drawer Bottom	1	1/1
11	S300-301-057-CM1-11	Drawer Side	2	1/1

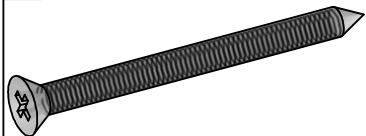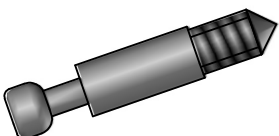FITTINGS LIST

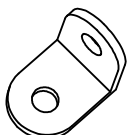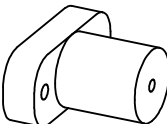A  Flat Head Screw Ø3,5 x 14mm (x22) +/2	B  Flat Head Screw M4 x 25mm (x2) +/1	C  Flat Head Screw Ø3,5 x 30mm (x4) +/1	D  Flat Head Screw Ø4,0 x 50mm (x2) +/1
E  Cam Bolt (x22) +/2	F  Cam Nut Ø15mm (x22) +/2	G  Dowel Ø6,0 x 30mm (x12) +/2	H  'L' Metallic Support (x3) +/1
I  Drawer Spacer Support (x4)	J  Nail (x8) +/1	K  Plastic Foot (x4) +/1	L  Drawer Runners (x1)
M  Glue (x2)	N  Hole Plugs (x6) +/1	O  Handle (x2)	


TIPS FOR FITTINGS CAM-LOCKS

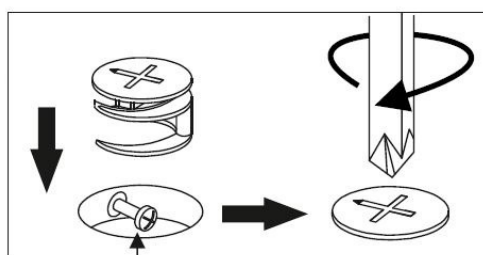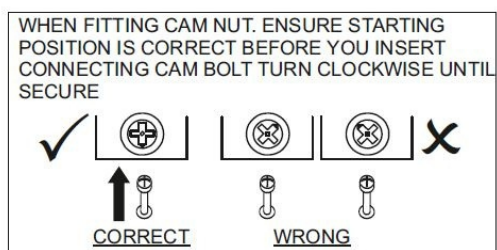

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example below)

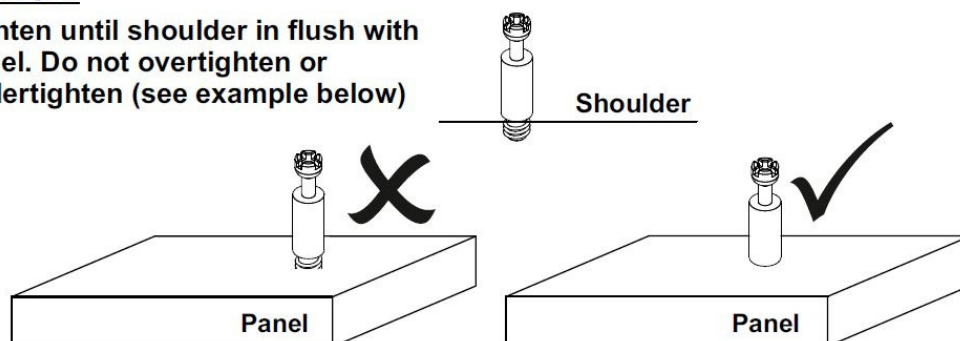

STEP 1




PARTS REQUIRED

07 - TOP PANEL x1

HARDWARE REQUIRED

E  04

TOOLS REQUIRED

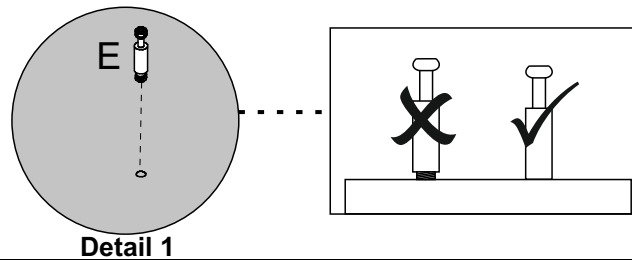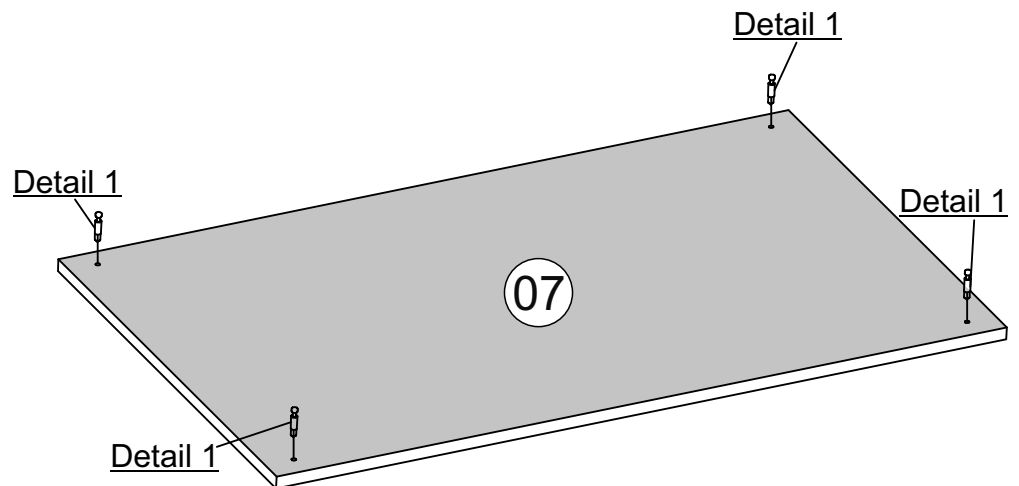

STEP 2

PARTS REQUIRED

02 - LEFT SIDE PANEL x1

04 - RIGHT SIDE PANEL x1


HARDWARE REQUIRED

A  08





E  04

G  04

I  04

M  01

TOOLS REQUIRED

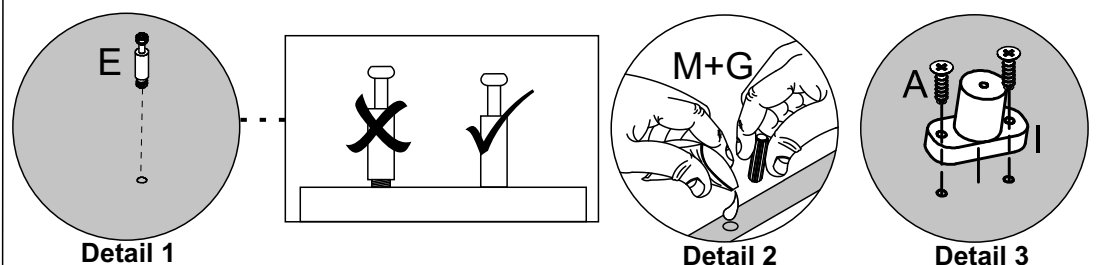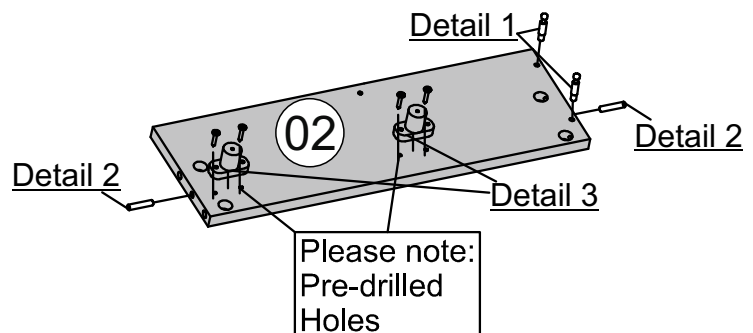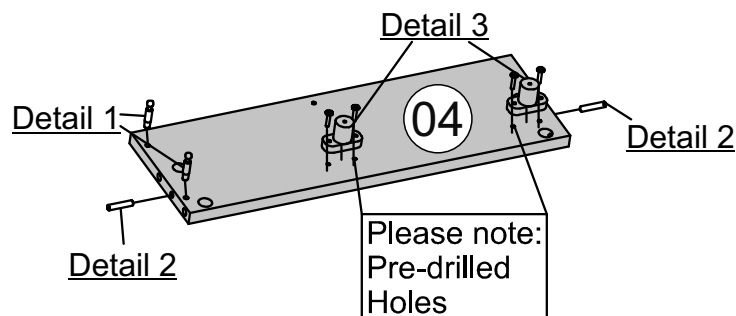


STEP 3

PARTS REQUIRED








02 - LEFT SIDE PANEL x1

04 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED

A  06H  02L  01

TOOLS REQUIRED

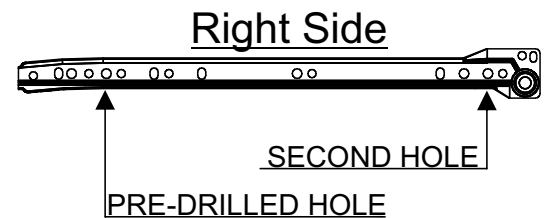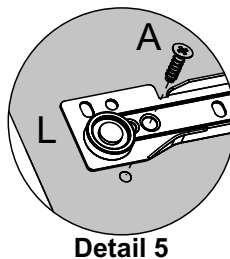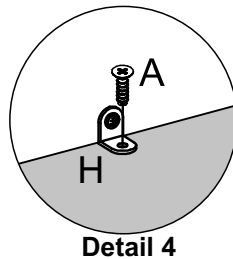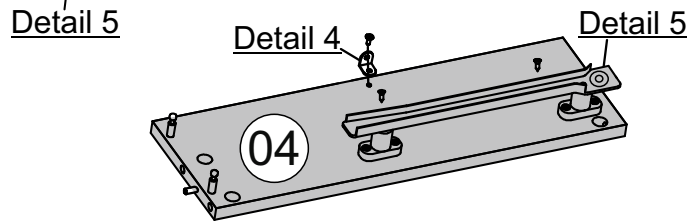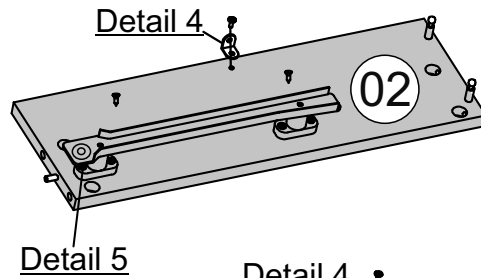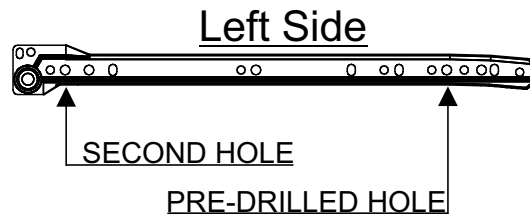

STEP 4

PARTS REQUIRED







01 - RIGHT FRONT/BACK LEFT LEG x2

03 - LEFT FRONT/BACK RIGHT LEG x2

HARDWARE REQUIRED

E  12J  04K  04

TOOLS REQUIRED

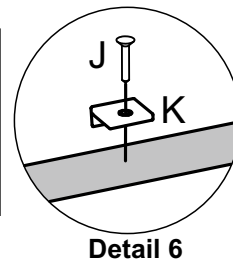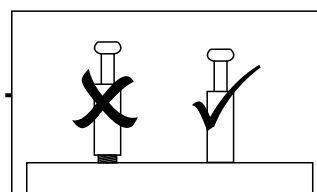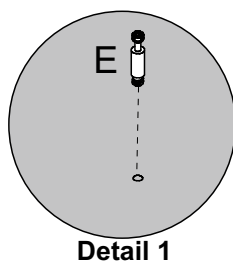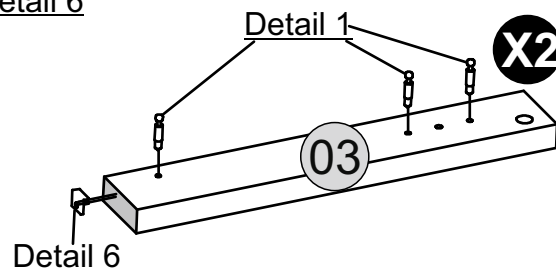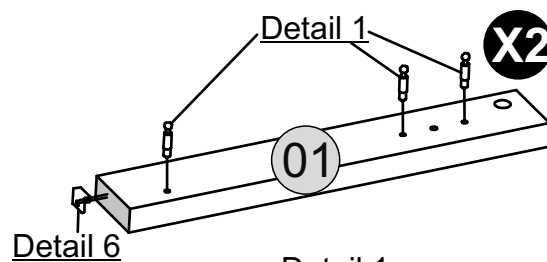

Detail 1

Detail 6

STEP 5

PARTS REQUIRED

01 - RIGHT FRONT/BACK LEFT LEG x1

02 - LEFT SIDE PANEL x1




03 - LEFT FRONT/BACK RIGHT LEG x1

04 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED

F  04


TOOLS REQUIRED

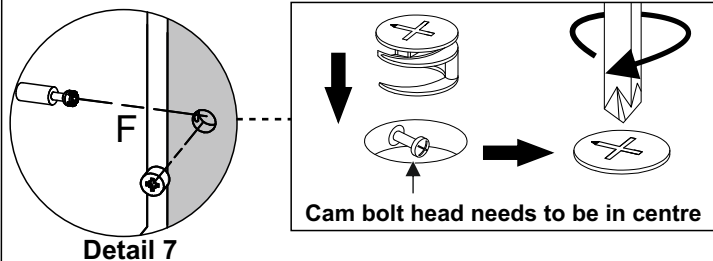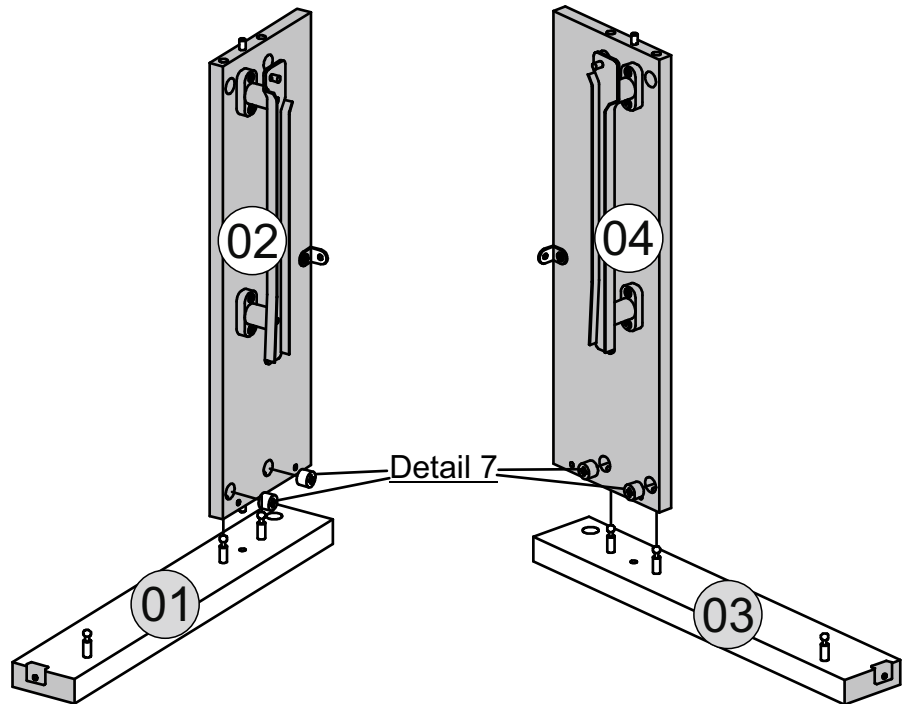

STEP 6

PARTS REQUIRED





05 - BACK PANEL x1

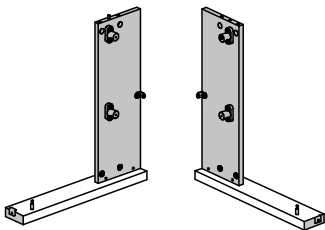

HARDWARE REQUIRED

A  01F  04H  01


TOOLS REQUIRED

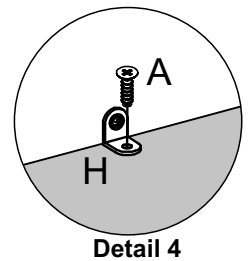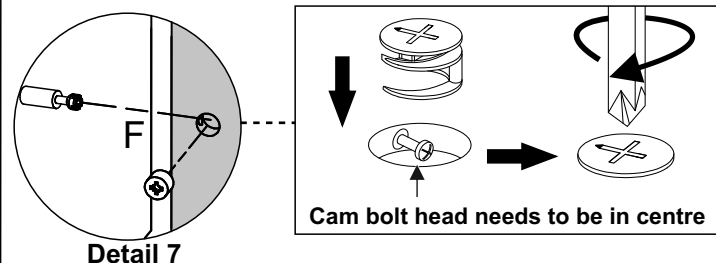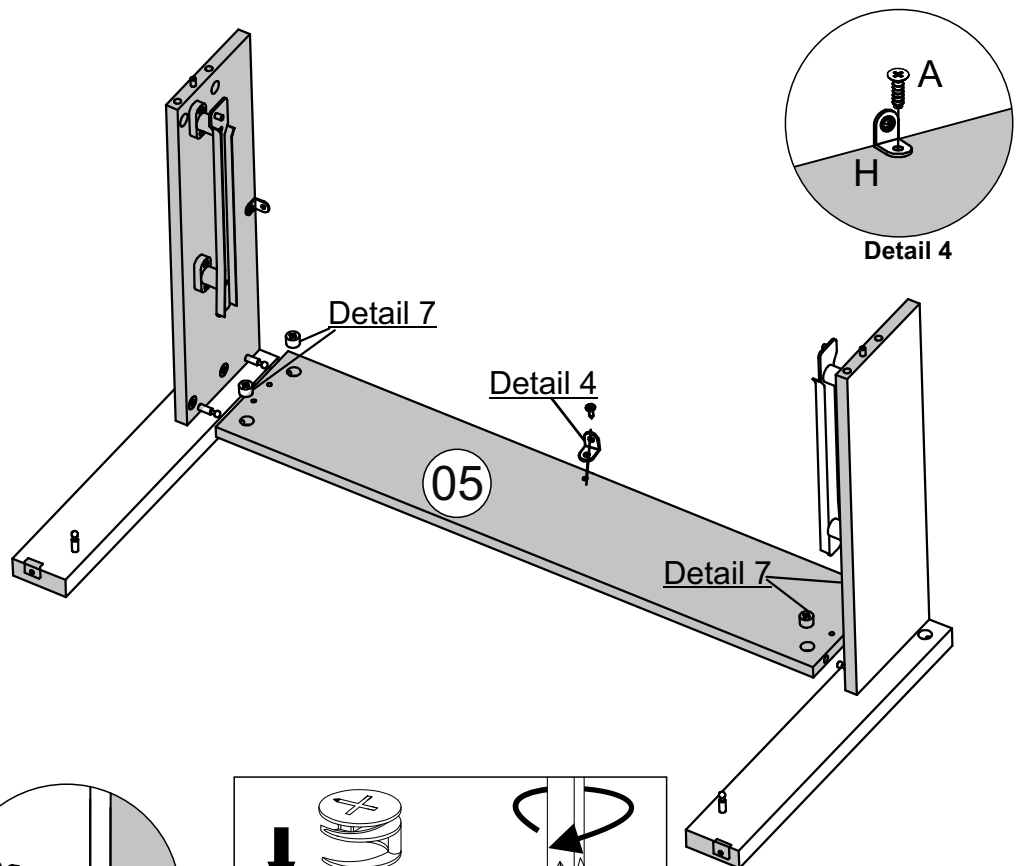

STEP 7

PARTS REQUIRED

06 - BASE PANEL x1





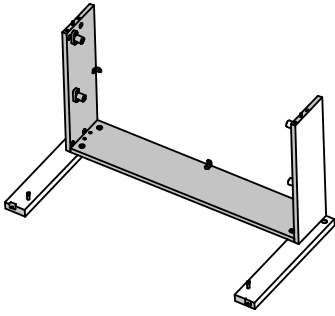


HARDWARE REQUIRED

C  04

F  02

TOOLS REQUIRED

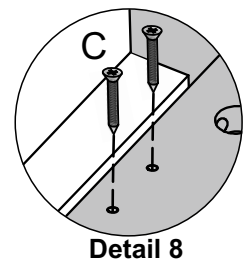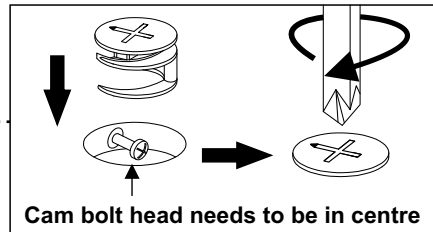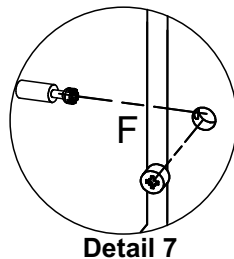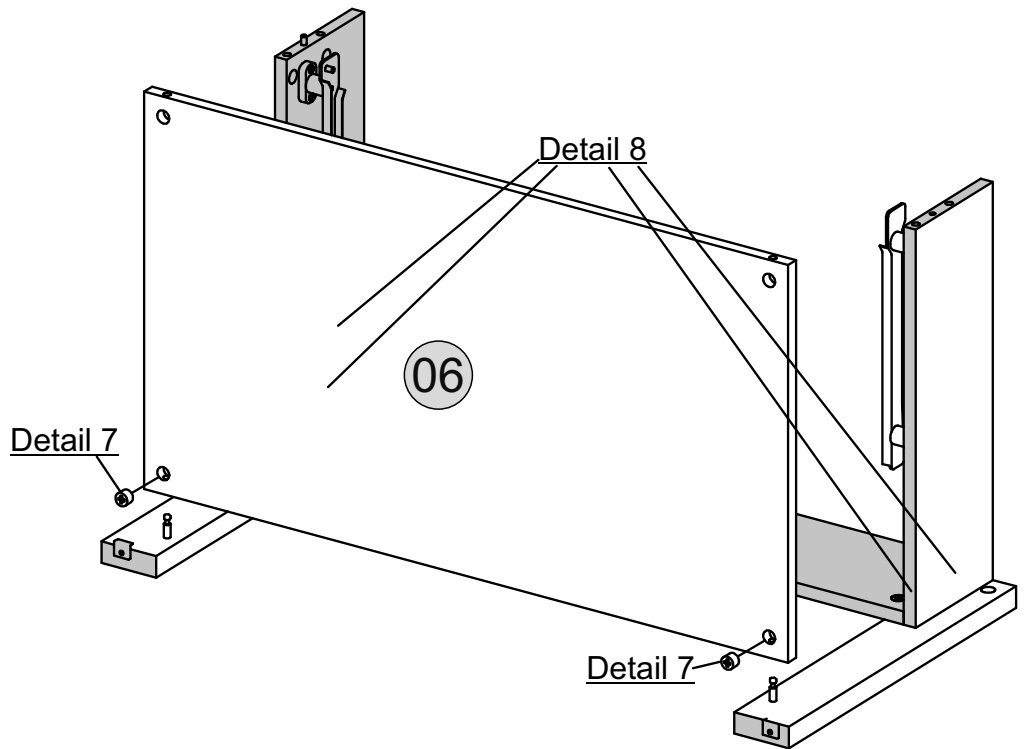


STEP 8

PARTS REQUIRED

01 - RIGHT FRONT/BACK LEFT LEG x1





03 - LEFT FRONT/BACK RIGHT LEG x1

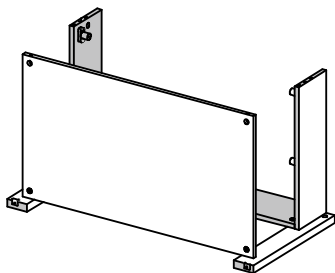

HARDWARE REQUIRED

F  06


TOOLS REQUIRED

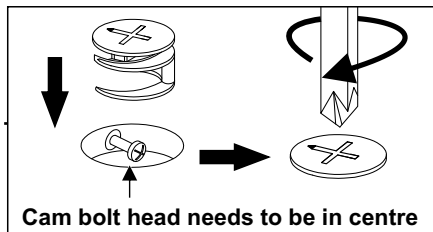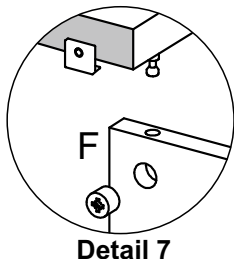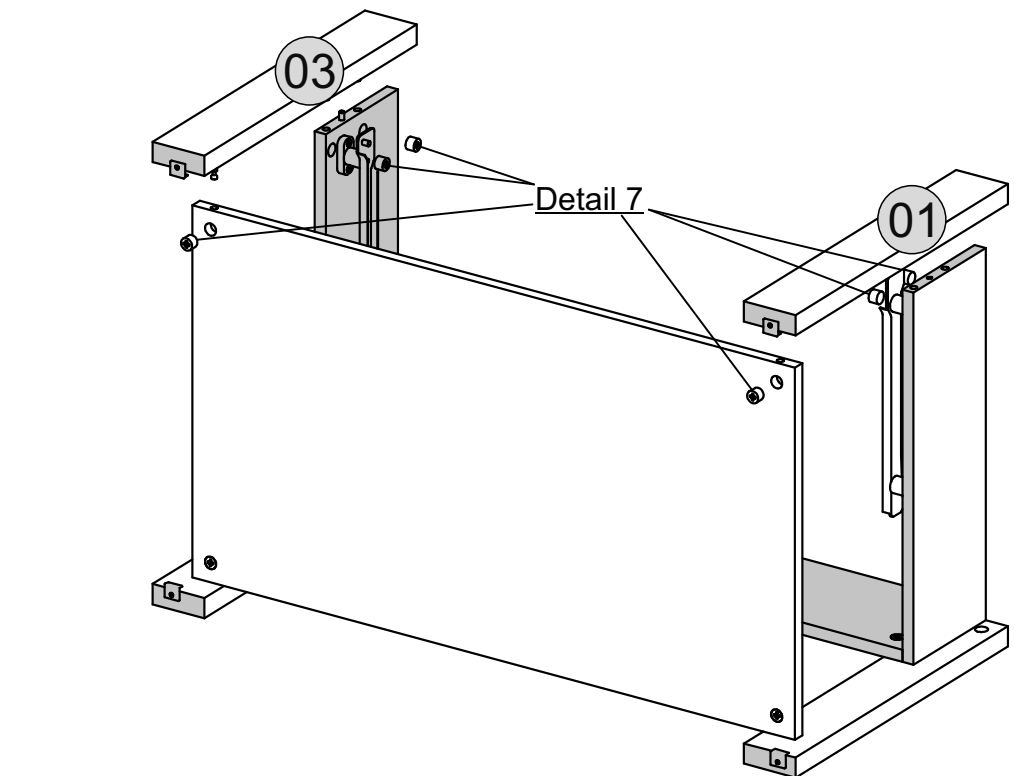

STEP 9

PARTS REQUIRED

07 - TOP PANEL x1

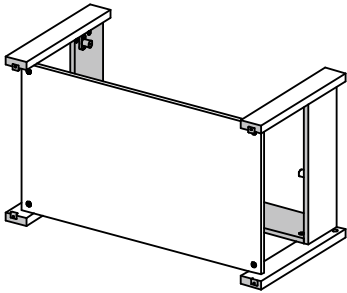







HARDWARE REQUIRED

A  03

F  04

N  04

TOOLS REQUIRED

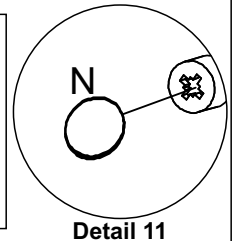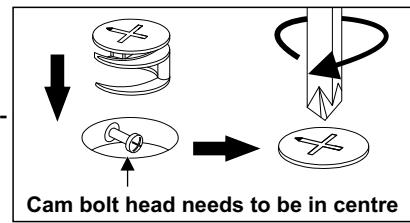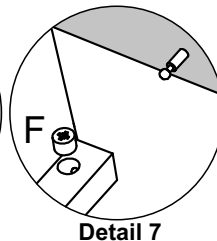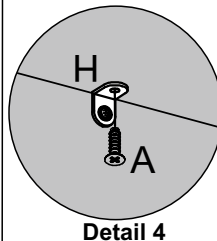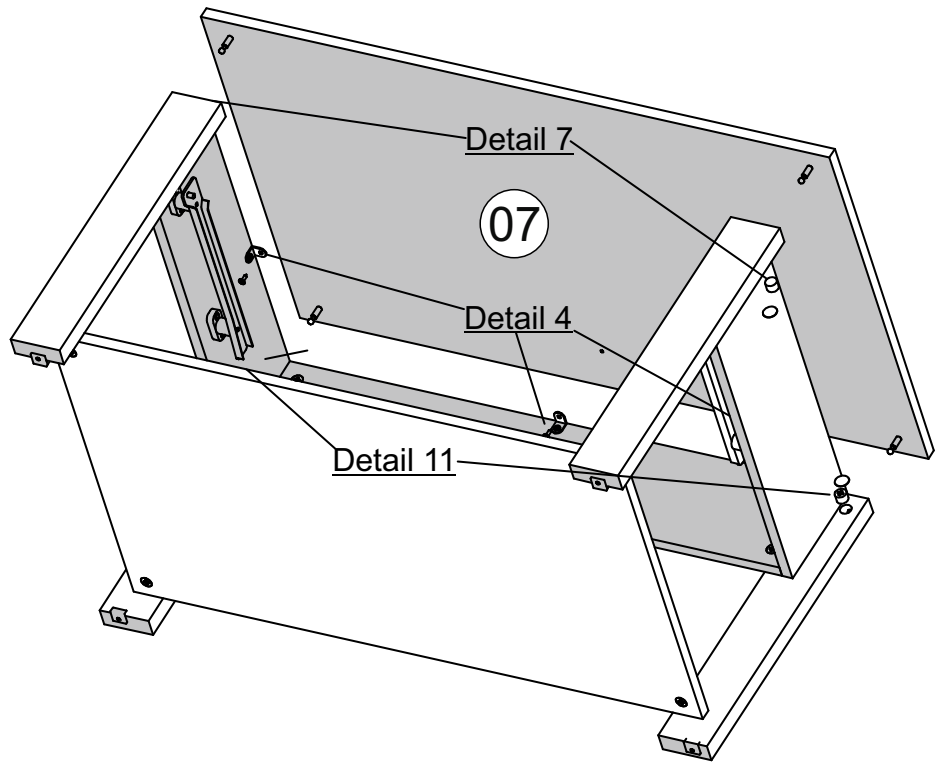

STEP 10

PARTS REQUIRED

08 - DRAWER FRONT x1

11 - DRAWER SIDE x2






HARDWARE REQUIRED

E  02

G  08

M  01

TOOLS REQUIRED

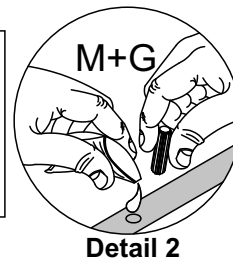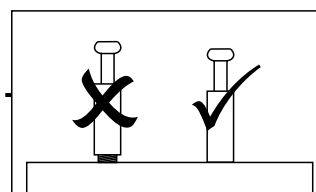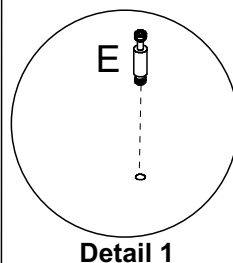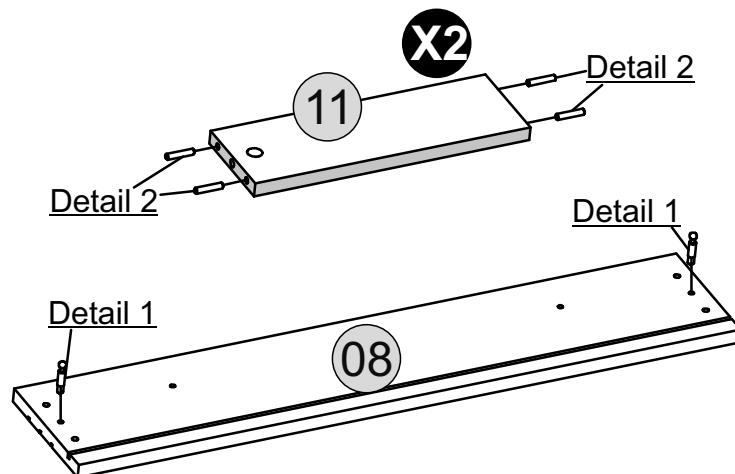

STEP 11

PARTS REQUIRED




09 - DRAWER BACK PANEL x1

11 - DRAWER SIDE x2

HARDWARE REQUIRED

D  02


TOOLS REQUIRED

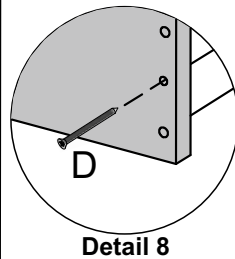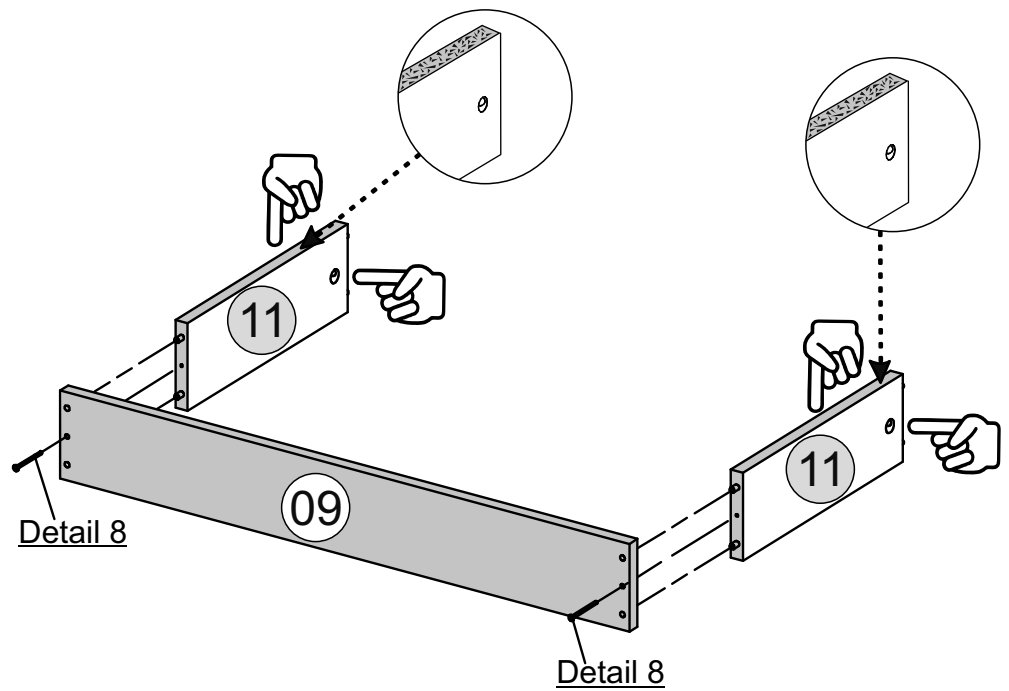

STEP 12

PARTS REQUIRED

08 - DRAWER FRONT x1





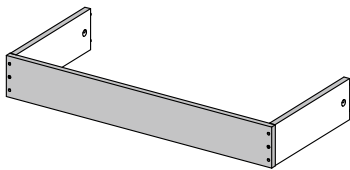


HARDWARE REQUIRED

F  02

N  02


TOOLS REQUIRED

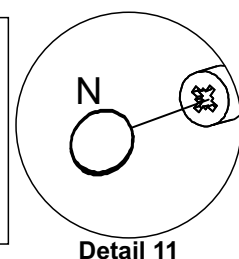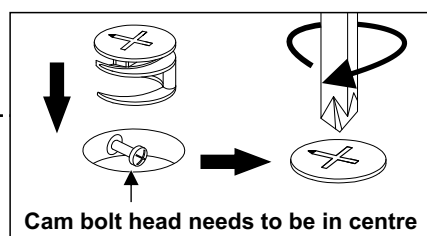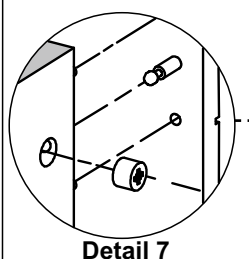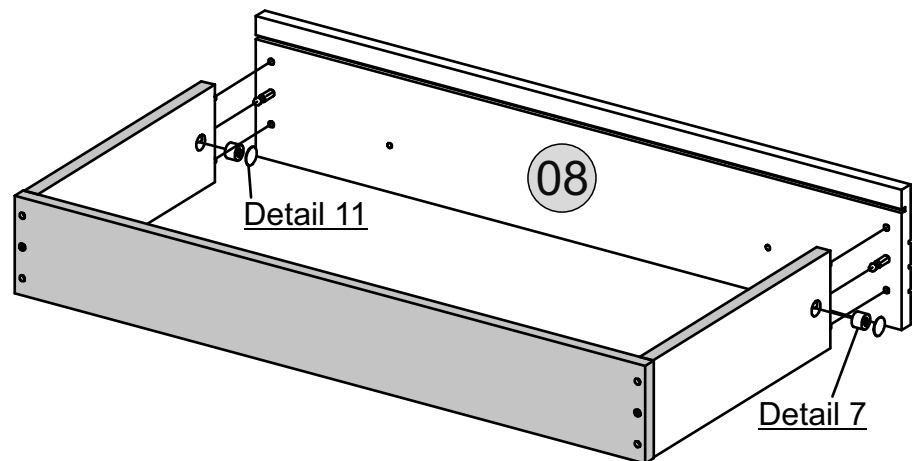

STEP 13

PARTS REQUIRED


10 - DRAWER BOTTOM x1

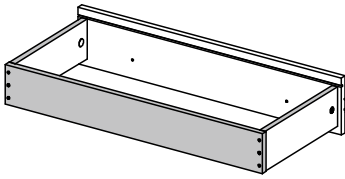




HARDWARE REQUIRED

A  04


J  04

L  01

TOOLS REQUIRED

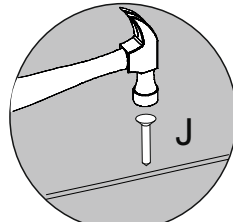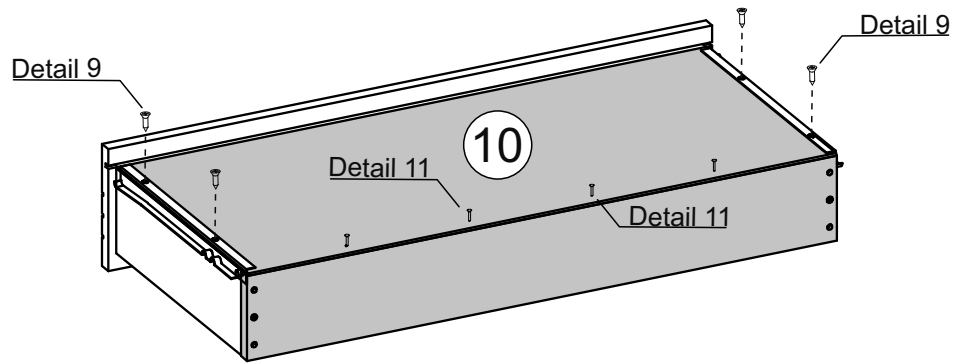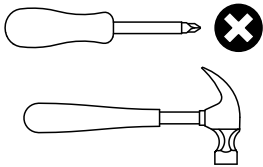


Detail 11

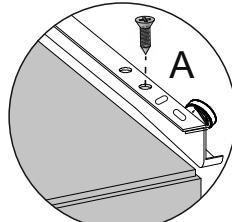

Detail 9

STEP 14

PARTS REQUIRED



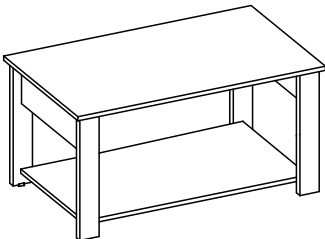


HARDWARE REQUIRED

B  02

O  02

TOOLS REQUIRED

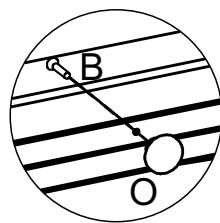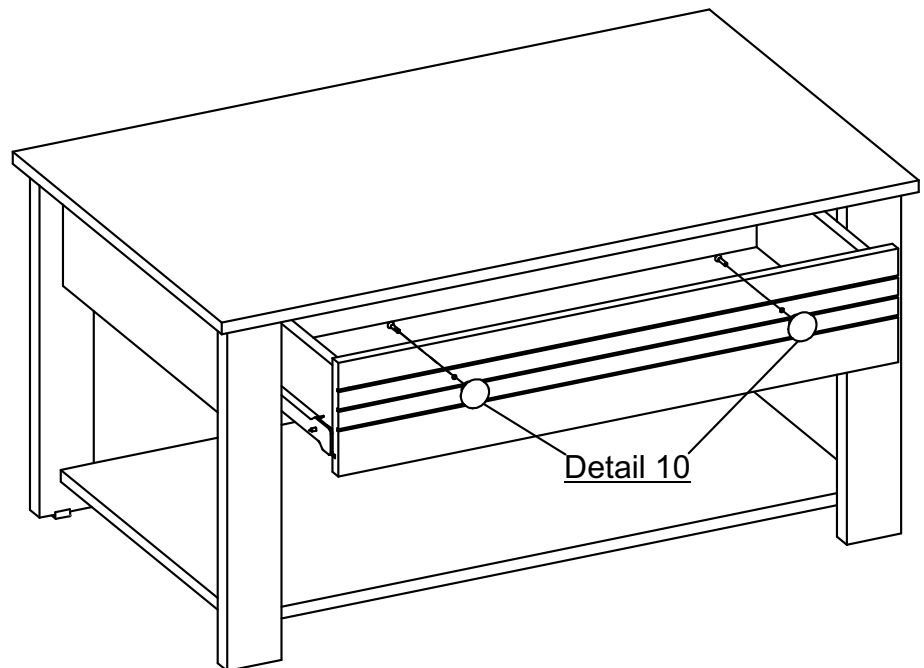

Detail 10